




1239 Commons Ct
Clermont, FL 34711
www.amazuluinc.com

Ph : 352-243-5309
Fax : 352-243-5361
info@amazuluinc.com

Decorate Your Ceiling With Bamboo Slats

This document shows how our Bamboo Slats can be used to give any room in your home a tropical look! First thing you would need are accurate measurements. Once you have some measurements for this ceiling, you need to do a few calculations to see how many slats you would need to cover this area. We sell the bamboo slats in packs of 25. Each one of these single slats are 6 foot long and 1.75" wide and .25" thick. Bundles of 50 will cover 43.74 sqft. Bundles of 25 will cover 21.90 sqft.

If we take an example with a measurement of 30 x 20, you would need to decide what way you want to lay the Bamboo Slats to give you the look you are going for. You can run these parallel with some of the lines in the room you are working on.

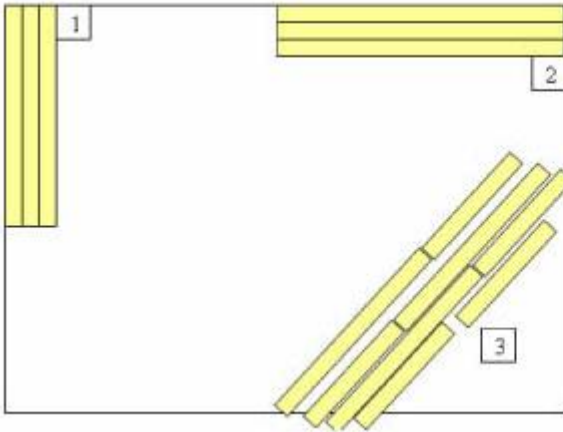

Depending on how you plan to arrange the slats will determine how many custom cuts you will need to make. Options 1 and 2 are fairly straightforward. When you lay one of the single bamboo slats, the next one will start where the last one finished. Where this connection comes together will give an appearance of one single Bamboo Slat. From a distance, the small space where the two slats join will look like a node (natural separation as the bamboo grows).

The 3rd option of laying the bamboo perpendicular to the lines of the ceiling will give you the same look but as you continue to the corners of the ceiling, you will have more and more customs cuts to fill this space.

We now know how many Bamboo Slats you will need and the orientation that you plan to lay them in. It is time to talk about how to adhere them to the ceiling. In past projects, we have found that a combination of epoxy and finishing nails would be the best method of applying the Bamboo Slats. You can run a small bead of epoxy (Liquid nails dries the same color as the bamboo) on the backside of the slat and place it against your ceiling. Once in place, drive a finishing nail in the center of the slat and one on each of the trailing ends of the slat (generally one every two feet should be sufficient). Continue this process for each slat. It will be like piecing together a puzzle if you have pre-cut your slats to fit in the ceiling space.

* Add custom stain to match existing room tones!*

Add some larger canes of bamboo for molding accents!